

5th Mode USER PROGRAMMABLE MODE

How To Use

Tap the sync button down until you have reached the fifth mode; flashes 5 times. While in this mode hold the Right trigger down and tap sync again, a red light will appear in the ?Player Two? LED spot telling you that you are ready to begin.

FYI: You will use this mode to help regulate how fast or slow your guns will shoot. The rate of fire is predetermined by the makers of the game and only allows players to fire weapons at certain speeds. In order to use your mod for future games you may need to change this setting thus allowing the IntensaFIRE to never be capped.

But How Do You Do The Wonderful Programming?

Easy. It is all done on your controller. You will use the triggers on your controller to regulate the speed and the sync button to set. The speed range from 255 to 1 with 255 being the slowest setting and 1 being the fastest. In order to see what setting you have the controller set to you will use the LED indicators. The ?Player 3? LED is a X10 setting (example: the light blinks 3 time that means the setting is on 30). The ?Player 4? LED is the X1 setting (example: if the light blinks 6 times that means the setting is on 6). So if the Player 3 LED blinks 7 times and the Player 4 LED blinks 3 times this means that your mod is set to 73. To change the speed you will use the triggers. Right Trigger to control speed (Slower (higher in number)). Left Trigger to control Speed (Faster (lower in number)). Once you find the setting that works for you tap the sync to set.

NOTE: you can reprogram this mod as many times as you please.